




Nikon N80 Gear Belt for Film Winding Replacement

This is a guide for replacing the gear film belt for film winding in your Nikon N80 Camera.

Written By: Maegan Vloria

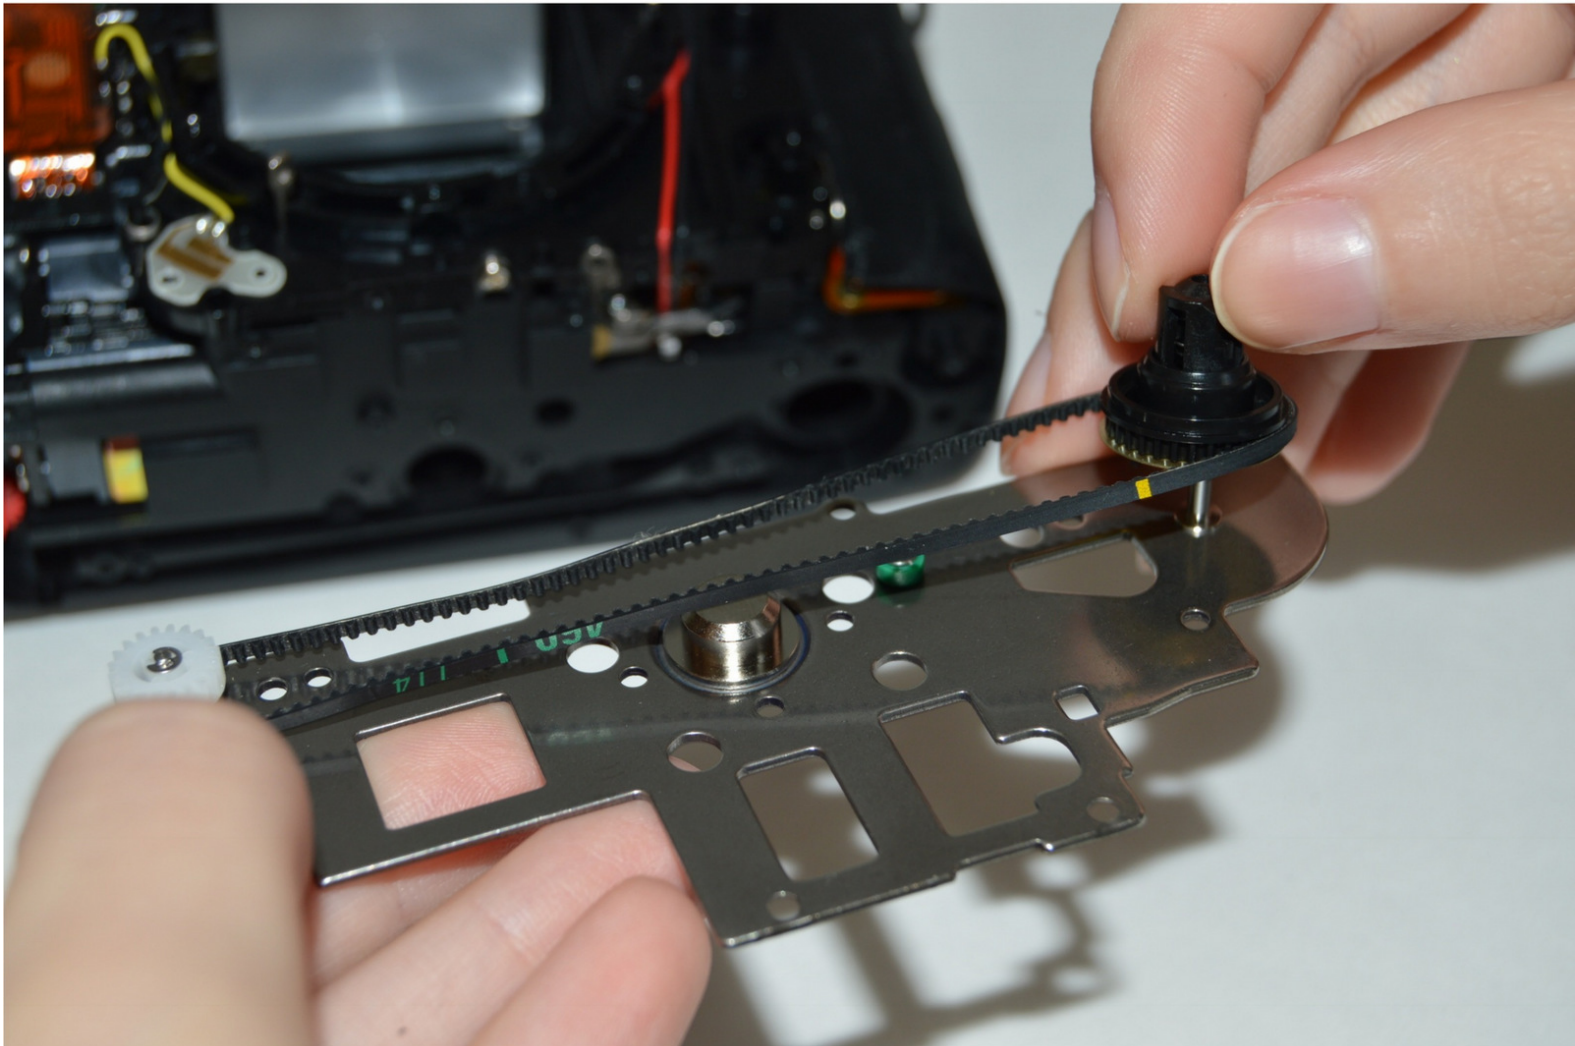

INTRODUCTION


Is the gear belt for film winding in your camera broken or has a tear? Try your hand at replacing it to make your camera work again. This guide will explain how to replace the gear belt in a Nikon N80/F80 Camera.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Gear Belt for Film Winding

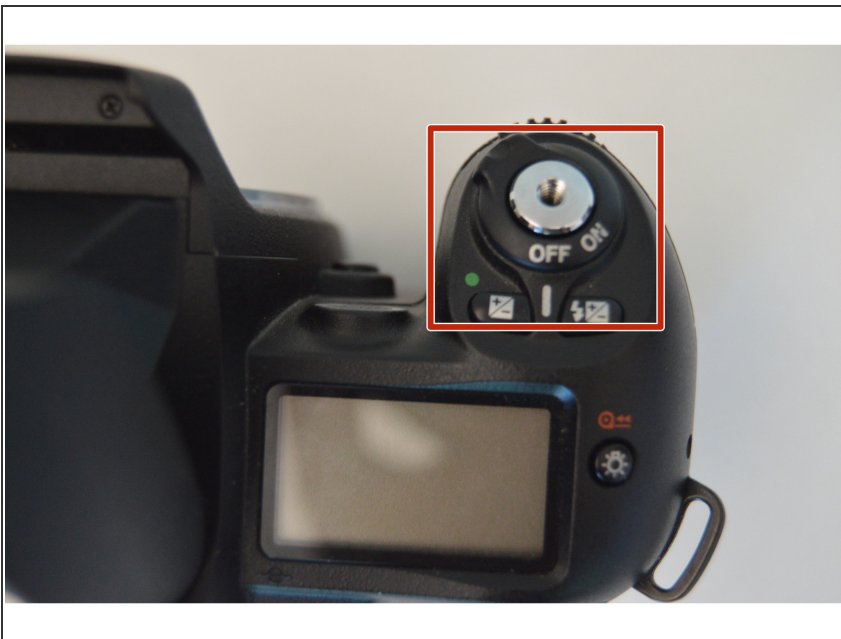



- Make sure the On/Off switch is in the Off position.

Step 2





- Rotate the camera so the bottom plate is accessible.
- Remove the seven 4.8mm screws on the bottom plate of the camera using a PH00 Phillips screwdriver.
- Remove the bottom plate.

Step 3

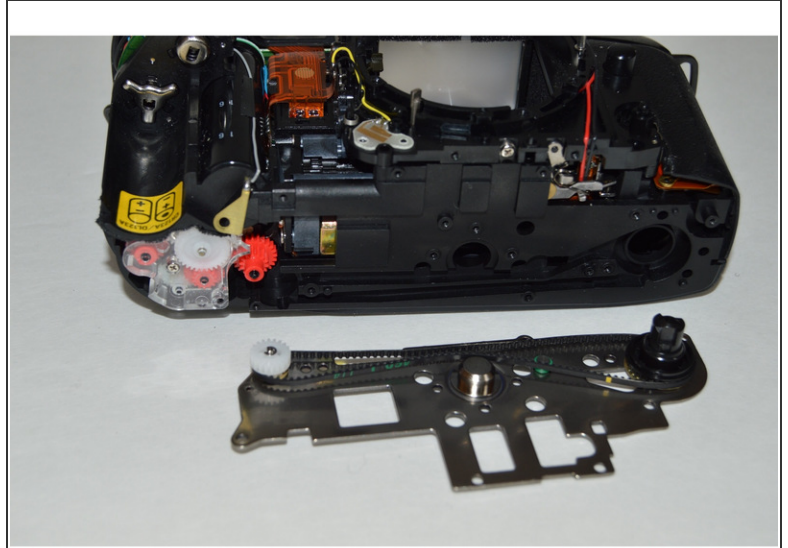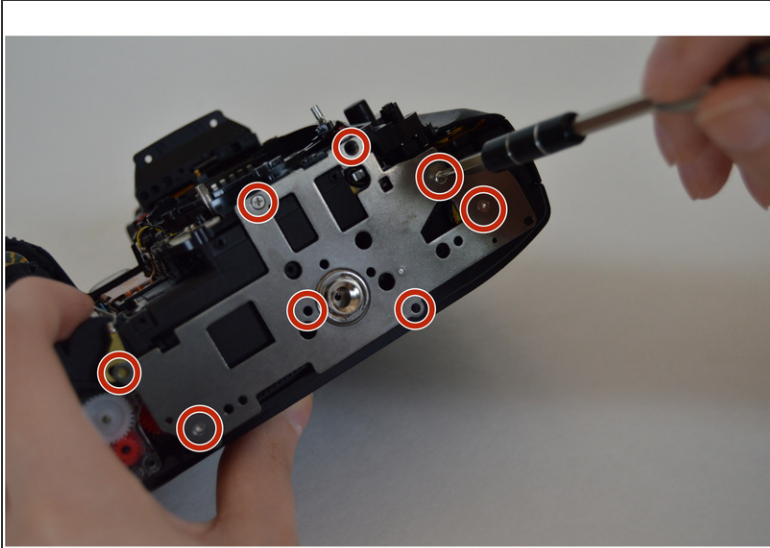

- Remove the eight 4.8mm screws holding on the metal plate.
- Remove the metal plate.

Step 4

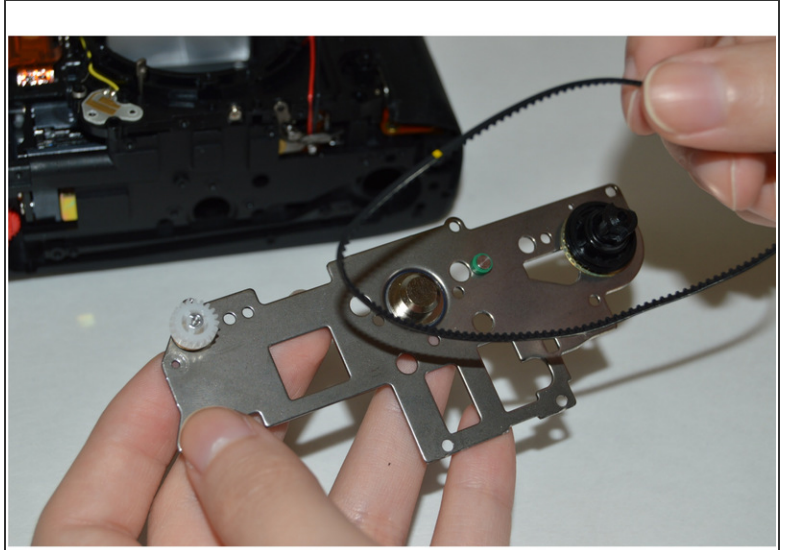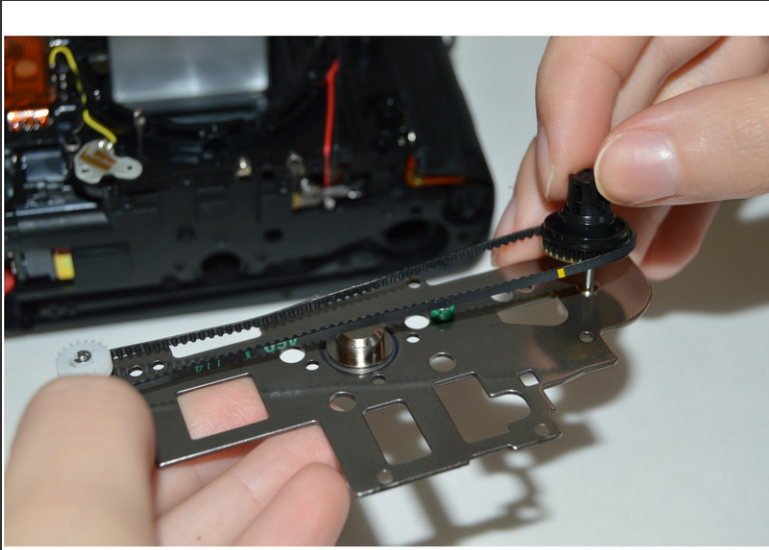

- Gently remove the black, rubber gear belt.
- Discard the old belt responsibly.
- Place new belt on.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-25 05:34:22 PM.